

# User's Manual of mobile phone

## BIRD E5018



## Contents

<b>Safety</b> .....	<b>3</b>
<b>Environment</b> .....	<b>4</b>
<b>1 Getting Started</b> .....	<b>4</b>
1.1 Installing the SIM card, battery, and storage card .....	4
1.2 Charging the Battery .....	5
1.3 Status Icons .....	5
1.4 Your Phone.....	7
<b>2 Using phone features</b> .....	<b>8</b>
2.1 Turning the phone function on and off.....	8
2.2 Making a call .....	8
2.3 Answering and Ending a call.....	8
2.4 In-call options .....	8
2.5 Using call history .....	8
2.6 Call settings .....	8
<b>3 Setting on your device</b> .....	<b>9</b>
<b>4 ActiveSync</b> .....	<b>11</b>
<b>5 Contacts</b> .....	<b>11</b>
<b>6 Exchanging Messages</b> .....	<b>12</b>
<b>7 Internet</b> .....	<b>13</b>

7.1 Ways of Connecting to the Internet.....	13
7.2 Browser.....	13
<b>8 Experiencing Multimedia .....</b>	<b>14</b>
8.1 Camera & Picture .....	14
8.2 Music .....	14
8.3 FM Radio.....	15
8.4 Voice Search.....	15
8.5 Sound record .....	15
<b>9 Other applications .....</b>	<b>15</b>
9.1 Calendar.....	15
9.2 Alarm Clock.....	16
9.3 Calculator.....	16

## Safety

Never attempt to disassemble your phone. You alone are responsible for how you use your phone and any consequences of its use.

As a general rule, always switch off your phone wherever the use of a phone is prohibited. Use of your phone is subject to safety measures designed to protect users and their environment.

Do not use your phone in damp areas (bathroom, swimming pool...). Protect it from liquids and other moisture.

Do not expose your phone to extreme temperatures lower than - 10°C and higher than + 55°C.

The physicochemical processes created by chargers impose temperature limits when charging the battery. Your phone automatically protects the batteries in extreme temperatures.

Do not leave your phone within the reach of small children (certain removable parts may be accidentally ingested).

**Electrical safety:** Only use the chargers listed in the manufacturer's catalogue. Using any other charger may be dangerous; it would also invalidate your warranty. Line voltage must be exactly the one indicated on the charger's serial plate.

**Aircraft safety:** When traveling by plane, you will need to switch your phone off when so instructed by the cabin crew or the warning signs.

Using a mobile phone may be dangerous to the operation of the aircraft and may disrupt the phone network.

Its use is illegal and you could be prosecuted or banned from using cellular networks in the future if you do not abide by these regulations.

**Explosive materials:** Please comply with warning signs at petrol station asking you to switch your phone off. You will need to comply with radio equipment usage restrictions in places such as chemical plants, fuel depots and at any location where blasting operations are under way.

**Electronic equipment:** To avoid the risk of demagnetization, do not let electronic devices close to your phone for a long time.

**Electronic medical equipment:** Your phone is a radio transmitter which may interfere with electronic medical equipment or implants, such as hearing aids, pacemakers, insulin pumps, etc.

**Hospitals:** Always make sure that your phone is switched off in hospitals when so instructed by warning signs or by medical staff.

**Road safety:** Do not use your phone when driving.

**Distance of operation:** This phone model has been tested and meets radiofrequency exposure guidelines

## Environment

**Packaging:** To facilitate the recycling of packaging materials, please obey the sorting rules instituted locally for this type of waste.

**Batteries:** Spent batteries must be deposited at the designated collection points.

**The product:** The crossed-out waste bin mark affixed to the product means that it belongs to the family of electrical and electronic equipment.

# 1 Getting Started

Getting to know your touch phone

## **1.1 Installing the SIM card, battery, and storage card**

You need to remove the back cover before you can install the SIM card and battery. Also, make sure to always turn off the power before installing or replacing the SIM card and battery.

### **To install the SIM card**

The SIM card contains your phone number, service details, and phonebook/ message memory.

1. Remove the battery if it is installed.
2. Locate the SIM card slot, and then insert the SIM card with its gold contacts facing down and its cut-off corner facing out the card slot.
3. Slide the SIM card completely into the slot.

**Note:** • The phone can be supported the double SIM cards. The card slot 1/2 will be both supported 3G&4G SIM card (WCDMA&LTE), but one SIM card can use 3G&4G networks only.

**If you need to use 3G&4G operation, please insert 3G&4G card in the card slot 1(Default SIM1 card, defined in the menu Settings/More.../Mobile networks), the SIM2 card will be supported 2G network only (If insert 3G &4Gcard in the card slot 2, you can also use 2G operation only).**

**• Some legacy SIM cards may not function with your device. You should consult with your service provider for a replacement SIM card. There may be fees for this service.**

### **To install the battery**

Your device comes with a rechargeable Lithium-ion battery and is designed to use only manufacturer-specified original batteries and accessories. Battery performance depends on many factors, including network configuration, signal strength, and usage patterns.

### **To remove the battery**

Make sure your device is turned off.

### **To install a memory card**

To have additional storage for your images, videos, music, and files, you can purchase a memory card and install it into your device.

Note: To remove the memory card, press it to eject it from the slot.

## **1.2 Charging the Battery**

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery. Some batteries perform best after several full charge/discharge cycles.

Note: Only the AC adapter and USB sync cable provided with your device must be used to charge the device.

Connect the USB connector of the AC adapter to the sync connector on your device, and then plug in the AC adapter to an electrical outlet to start charging the battery.

As the battery is being charged while the device is on, a charging icon appears in the title bar of the Home screen. After the battery has been fully charged, a full battery icon appears in the title bar of the Home screen.

Warning: • Do not remove the battery from the device while you are charging it using the AC or car adapter.























• As a safety precaution, the battery stops charging before it overheats.

### **1.3 Status Icons**

#### **Connection status icons**

Along the top of your phone screen is the status bar. On the left side, icons will appear, notifying you of a new message, upcoming calendar event, or something else you should notice. On the right side of the status bar, you'll see connection status icons.



	Network signal		Alarm is set		Wireless services are off (Airplane mode)
	EDG service connected, data flowing		Bluetooth is on		Phone on mute
	WCDMA service connected, data flowing		Connected the PC	 	Battery is low Battery is very
	LTE service connected, data flowing		Sign-in/sync error		Battery is charging
	Call in progress		Song is playing		GPS icon
	Missed call		Ringer is off (Silent mode)		Connected the earphone
	Call forward		WLAN service connected		SMS/MMS

## Read your notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.

Ongoing notifications report activities such as call forwarding ON, current call status, song playing.

Notifications report the arrival of new messages, calendar events, and alarms. You can clear notifications list by selecting 'Clear' notifications at the top of the notifications window.

To open the message, reminder, or other notification, you can touch the items. To close the notifications window, slide your finger up the screen.

### 1.4 Your Phone



### **1) Menu Key**

Press Menu Key to add/manage applications.wall papers.notices.notices and menu settings.

### **2) Home Key**

Press Home key at a non-standby screen to go back to standby screen.

### **3) Back Key**

Press Menu Key to go back to previous menu

### **4) Volume Key**

Press Volume Key to change the volume

### **5) Power Key**

Short press of the Power key shall lock the screen and a long press on the Power key shall switch on/off the device

## 2 Using phone features

## 2.1 Turning the phone function on and off

To enable or disable Airplane Mode

## 2.2 Making a call

On Home screen, touch  -> Phone to enter the dial screen.


## 2.3 Answering and Ending a call

When you receive a phone call, the incoming voice call screen will appear, allowing you to either answer or ignore the call.

## 2.4 In-call options

While on a call, reveal the in-call options: Speaker, Mute, Hold, End.

## 2.5 Using call history

The missed call icon  appears in the title bar when you missed a call.


## 2.6 Call settings

On the dialing screen or call log screen, press MENU > Settings to enter Call settings, you can make the operation of voice call, voice call, internet call and the other settings.

## Other Settings

**Fixed Dialing Numbers:** This feature allows you to restrict outgoing calls to a fixed set of numbers. To enable this feature, you must know the SIM PIN2 code for your phone. You can get this number from your wireless operator, assuming this feature is supported.

## 3 Setting on your device

Control phone-wide settings from the Home settings screen: touch  and select Settings.

### 3.1 Wireless & networks

#### SIM management

You can select to activate or deactivate the SIM card you want to open.

Set the default SIM to use voice call, messaging and data connection.

#### WLAN

Wlan on/off: Select this check box if you prefer to use Wlan for your data connection.


Wlan settings: Open the Wlan settings screen; select it from the network list. Provide your username or password if required.

#### Bluetooth

Bluetooth on/off: Use this check box to turn Bluetooth services on or off.

Bluetooth settings: With Bluetooth services on, you can open the Bluetooth settings screen to:

More...

Airplane mode on/off: When airplane mode is selected, all wireless connectivity is off. This icon  will display in the status bar when airplane mode is selected.

### **3.2 Device**

Audio profiles

Select one user profile and enter the following options:

Vibrate/Volumes/Voice ring tone/ Notification ring tone/Dial pad touch tones/Touch sound

Display

Brightness: Select to open the brightness control, and then slide your finger along the brightness bar to set the level. In sunlight, increase the level.

Sleep: Select to decide how long your phone must be inactive before the screen turns off.

Storage

View and manage the data storage on your phone.

## Applications

Unknown sources: Select this check box if you want the ability to download applications from the Web. With this check box not selected, you will only be able to download applications from Android Market. To ensure your personal data and phone remain secure; it is recommended you not select this check box.

Manage applications: View all the applications stored on your phone and how much space they occupy. If you've downloaded an application from Android Market, you can uninstall it from this screen.

## **3.3 Personal**

### Location access

My Location: by means of Wireless networks for determining your location

### Security

Screen unlock pattern/SIM card lock settings:/Visible passwords

### Backup & reset

You can select to reset your phone to factory settings. This will erase all your data from the phone and require you to sign in and go through the setup screens to use any of the applications.

## **3.4 Accounts**

### Accounts & sync

Turn on/off synchronization for all services.

## **3.5 System**

### Date & time

Set time, time zone, and date: Use Automatic unless you need to override the network values.

### About phone

View the model number and version information for your phone.



## 4 Active Sync

### 4.1 Data synchronization

Some applications on your phone (Contacts and so on) give you access to the same personal information that you can add, view, and edit on your computer using Web applications. This means that when you add, change, or delete your information in any of these applications on the Web, the updated information also appears on your phone, and vice versa. Also, if you lose your phone or if your phone is destroyed, your personal information is not lost and will appear, as before, on a replacement phone.

#### Sync by application

Control synchronization Contacts

### 4.2 Bluetooth

You can use Bluetooth to send and receive calls using a headset or hands-free car kit.

#### Discoverability

By default, your phone is not “discoverable”. This means other Bluetooth devices will not see your phone in their scans for Bluetooth devices. If you make your phone discoverable, it will be visible to other Bluetooth devices for up to 120 seconds.

#### Name your Bluetooth device

Select Settings > Bluetooth > Bluetooth settings > Device name.

## **Pair & connect with Bluetooth devices**

Before your phone can communicate with a Bluetooth headset or hands-free car kit, the devices must “pair”, then “connect”:

If you pair with a second headset while connected to the first, the first headset will remain connected. To switch connection to the second headset you must manually select that headset again after pairing.

## **Rescan for Bluetooth devices**


If you want to update the list of Bluetooth devices, select ‘Scan for devices’.

# 5 Contacts

The contacts on your phone are synced with your account contacts stored on the Web.

To view the contacts on your phone, touch  and select People.

## **Add a contact**

1. On the Home screen, then touch  and select People. Your contact list appears.
2. Touch the + icon on the bottom of the screen to add new contact.

## **Assign favorites**

Use Favorites as a way to display only those contacts you contact most frequently.

### **Edit contact details**

You can always make changes to the information you've stored for a contact

### **Communicate with a contact**


From Contacts you can quickly call or text a contact's default number, as displayed below their name on the screen. However, to view all the information you've stored for a contact, and to initiate other types of communication with that contact, open the Contact details screen. To open a contact's details screen, simply select their name from Contacts.

### **SIM contacts importer**

If you have stored names and phone numbers on your SIM card, you can add these to the Contacts stored on your phone by selecting this settings option.

## **6 Exchanging Messages**

### **SMS and MMS messaging**

To open the SMS & MMS Messaging application, on the Home screen, then touch  and select the Messaging icon.

### **About text and multimedia messages**

SMS messages are also known as “text” messages and can each be around 160 characters. If you continue to type after the limit is reached, your message will be delivered as one, but count as more than one message. These are called “concatenated” messages.

MMS messages are also known as “multimedia” or “picture” messages and can contain text, picture, audio, and video files.

When you compose a message, the phone will automatically convert a text message into a multimedia message as soon as you add a subject or an attachment, or if you address the message using an email address rather than a phone number.

### **View the message from the message list**

Select a message thread in the list to open it for reading. When open, the individual messages appear stacked on the screen, much like with instant messaging conversations (or chats).

### **Compose text and multimedia messages**

1. Touch ‘Compose’ icon. The Compose screen opens.
2. Add recipients by typing a name, phone number, or email address in the ‘To’ field. Matching contacts will appear. Select the recipient or continue typing. Add as many recipients as you wish. If you send the message to an email address, the message will automatically convert from a text to a multimedia message.
3. To add a subject, press MENU and select ‘Add subject’. If you add a subject, the message will convert to a multimedia message.

4. To add an attachment, touch 'Attach' icon on the right-top of the screen. Adding an attachment will always convert the message to a multimedia message. Select from audio or picture files. You can select to take a new picture if you want, or record an audio file. Any recordings you make will be stored automatically in the Music application in a play list named "My recordings". To remove an attachment, select the attachment's 'Remove' button.
5. Type your message. As you type, you'll be able to track how many characters/messages you're creating. Remember that text messages have a limit around 160 characters. Once you go over that limit, a new message is actually created but automatically joined into one when received.
6. Select 'Send' when ready. You can also save a draft.
7. As your message sends, progress displays in the title bar. If you see this icon to the right of the message, it means your message is still being delivered.

### **Save message as draft**

While composing, press BACK, your message automatically saves as a draft.

### **Text and multimedia message settings**

To set text and multimedia message preferences, from the message list, press MENU and select 'Settings'.

## **7 Internet**

### **7.1 Ways of Connecting to the Internet**

Your device's networking capabilities allow you to access the Internet or your corporate network through WLAN, GPRS, EDGE (if available)

## 7.2 Browser

To open the Browser, touch  and select Browser icon.

### Zoom and navigation in Web pages

While viewing a Web page, you can press MENU and select Settings > >Advanced >Default zoom to set the zoom controls.

### The Browse screen

From the Browse screen you can do the following:

Go to a Web page: Make sure the focus is not on a text box and then start typing the URL.

### Open pages in separate windows

You can keep more than one Web page open by using multiple windows to display the pages.

### Manage bookmarks

You can store as many bookmarks as you want on your phone.

Press MENU and select 'Bookmarks'. The Bookmarks screen opens.

### Set your home page

You set your home page from the Settings screen.press MENU and select More > Settings. The Settings screen opens.

### **Download Web files and applications**

Before you download any files or applications using the Browser,

## **8 Experiencing Multimedia**

### **8.1 Camera & Picture**

All the pictures you can capture or view on your phone are stored on memory card, which must be installed in your phone. Before you can use the Camera or view pictures in Pictures, make sure you have a card installed.


#### **Take a picture**

Captured pictures are saved to the “DCIM” folder on your memory card or the phone.

#### **View your pictures**

To view the pictures you’ve captured, as well as any you’ve stored on your memory card or the phone storage

### **8.2 Music**

To open your music Library, on the Home screen, touch  and select the Music icon.

### **Load music onto your Memory card**

All the music you can listen to on your phone is stored on memory card.

### **Play back music**

At any level in your Library, touch & hold a listing (a song, artist, album, or playlist) to open the context menu. Select Play to begin play and go to the Playback screen.

### **Create a playlist on your phone**

From the Library, select a category. From the list that appears, navigate to the artist, album, or song that you want on a playlist.

### **Manage your playlists**

Go to the Library screen and select 'Playlists'.

### **Create ringtones from songs**

You can set any of your songs as a phone ringtone

### **Delete music from memory card**

All the music you play on your phone is stored on the inserted memory card.

## **8.3 FM Radio**



This device provides radio function.

#### **8.4 Voice Search**

When data connection or WLAN network is connected, input the keywords on the input field to search the web page that matched keywords.

#### **8.5 Sound record**

The phone can be as sound record.

## **9 Other applications**

### **9.1 Calendar**

#### **Calendar views**

You can view multiple calendars on your phone, so each calendar event is coded with a color.

You can view your calendar in a variety of ways. Touch the date on the left-top of the screen to select from Day, Week, Month or Agenda.

#### **Create an event**

From any of the views, press MENU and select 'New event' to open the new Event details screen.

#### **Edit an event**

To edit an event, you must have the View event screen open and you must have created, or have write privileges, for the event.

## **Calendar settings**

From any of the calendar views, press MENU and select Settings.

### **9.2 Alarm Clock**

To open Alarm Clock, on the Home screen, then touch  and select Clock icon. The Alarm clock offers as many alarms as you want.

#### **Set an alarm**

Three alarms are set up for you, ready to customize. All two alarms are turned off by default. Select the check box to turn on the alarm. If no day shows under the set time, the alarm will go off once when the set time is reached.

#### **Add more alarms**

To add more than three alarms, from the main Alarm Clock screen, press MENU and select 'Add alarm'.


#### **Change clock display**

You can change the appearance of the clock displayed on the main Alarm Clock screen:

#### **Change date & time display**

You can change the format of the time displayed in your alarms from the global Settings screen

### 9.3 Calculator

To open Calculator, on the Home screen, then touch  and select the Calculator icon.